

## TRX BATERIE SONY NP-FV50 1150MAH



|              |   |
|--------------|---|
| Cena celkem: | <b>352 Kč</b><br><b>(bez DPH: 291 Kč)</b> |
| Běžná cena:  | <b>387 Kč</b>                             |
| Ušetříte:    | <b>35 Kč</b>                              |
| Kód zboží:   | BATRX3900                                 |
| Part No.:    | TRX-FV50                                  |
| Záruka:      | 24 měs.                                   |
| Stav:        | Nové zboží                                |

### Popis

## TRX baterie Sony NP-FV50 1150 mAh

Kompatibilní baterie pro videokamery Sony.

**Poznámka:** Společnost Sony označuje Li-Ion články jinou nominální hodnotou napětí, než běžné normy, proto mohou být jejich baterie označeny 6,8 nebo 7,2 V! Použití je však lze bez omezení.

### ZÁKLADNÍ SPECIFIKACE

**Kapacita:** 1150 mAh

**Napětí:** 7,2 / 7,4 V

**Technologie baterie:** Li-iontová

**Nahrazuje baterie:**

Sony NP-FV30, Sony NP-FV40, Sony NP-FV50, Sony NP-FV70, Sony NP-FV100, Sony NP-FH30, Sony NP-FH50, Sony NP-FH60, Sony NP-FH70, Sony NP-FH100, Sony NP-FP50, Sony NP-FP70, Sony NP-FP71, Sony NP-FP90, Sony NPFV30, Sony NPFV40, Sony NPFV50, Sony NPFV70, Sony NPFV100, Sony NPFH30, Sony NPFH50, Sony NPFH60, Sony NPFH70, Sony NPFH100, Sony NPFP50, Sony NPFP70, Sony NPFP71, Sony NPFP90

**Pro videokamery:**

DCR-DVD105E, DCR-DVD106E, DCR-DVD108E, DCR-DVD109E, DCR-DVD110E, DCR-DVD115E, DCR-DVD150, DCR-DVD150E, DCR-DVD202E, DCR-DVD203E, DCR-DVD205E, DCR-DVD304E, DCR-DVD305E, DCR-DVD306E, DCR-DVD308E, DCR-DVD310E, DCR-DVD403E, DCR-DVD404E, DCR-DVD405E, DCR-DVD406E, DCR-DVD408E, DCR-DVD410E, DCR-DVD450, DCR-DVD450E, DCR-DVD505E, DCR-DVD506E, DCR-DVD508E, DCR-DVD650E, DCR-DVD850E, DCR-DVD92E, DCR-HC16E, DCR-HC17E, DCR-HC18E, DCR-HC19E, DCR-HC20E, DCR-HC22E, DCR-HC23E, DCR-HC24E, DCR-HC26E, DCR-HC27E, DCR-HC28E, DCR-HC30E, DCR-HC32E, DCR-HC35E, DCR-HC36E, DCR-HC37E, DCR-HC38E, DCR-HC39E, DCR-HC40E, DCR-HC42E, DCR-HC44E, DCR-HC45E, DCR-HC46E, DCR-HC47E, DCR-HC48E, DCR-HC51E, DCR-HC53E, DCR-HC62E, DCR-HC85E, DCR-HC94E, DCR-HC96E, DCR-SR100E, DCR-SR15E, DCR-SR15ES, DCR-SR190E, DCR-SR20E, DCR-SR200E, DCR-SR21E, DCR-SR290E, DCR-SR30E, DCR-SR300E, DCR-SR32E, DCR-SR33E, DCR-SR35E, DCR-SR36E, DCR-SR37E, DCR-SR38E, DCR-SR40E, DCR-SR42E, DCR-SR46, DCR-SR46E, DCR-SR47, DCR-SR47L, DCR-SR47R, DCR-SR47S, DCR-SR50E, DCR-SR52E, DCR-SR55E, DCR-SR57E, DCR-SR58E, DCR-SR60E, DCR-SR62E, DCR-SR67, DCR-SR67E, DCR-SR68E, DCR-SR68/R, DCR-SR68S, DCR-SR70E, DCR-SR72E, DCR-SR75E, DCR-SR77E, DCR-SR78E, DCR-SR80E, DCR-SR82E, DCR-SR87, DCR-SR88, DCR-SR90E, DCR-SX15E, DCR-SX20EK, DCR-SX21E, DCR-SX30E, DCR-SX31E, DCR-SX33E, DCR-SX34E, DCR-SX41, DCR-SX43R, DCR-SX44, DCR-SX45, DCR-SX45B, DCR-SX45E, DCR-SX45EB, DCR-SX45EL, DCR-SX45ER, DCR-SX45L, DCR-SX45R, DCR-SX45S, DCR-SX50E, DCR-SX53E, DCR-SX63, DCR-SX65, DCR-SX65B, DCR-SX65E, DCR-SX65L, DCR-SX65R, DCR-SX65S, DCR-SX73E, DCR-SX83, DCR-SX85, DCR-SX85E, DCR-SX85S, HDE-SX43E, HDE-SX65E, HDR-CX105VE, HDR-CX106VE, HDR-CX11VE, HDR-CX110, HDR-CX110B, HDR-CX110/L, HDR-CX110/R, HDR-CX115E, HDR-CX115VE, HDR-CX116E, HDR-CX116VE, HDR-CX120, HDR-CX130B, HDR-CX130E, HDR-CX130EB, HDR-CX130EL, HDR-CX130ER, HDR-CX130R, HDR-CX150, HDR-CX155E, HDR-CX155VE, HDR-

CX160B, HDR-CX160E, HDR-CX170, HDR-CX180, HDR-CX180E, HDR-CX180EB, HDR-CX180EL, HDR-CX180ER, HDR-CX180ES, HDR-CX190, HDR-CX190B, HDR-CX190E, HDR-CX200, HDR-CX200B, HDR-CX200E, HDR-CX210, HDR-CX210B, HDR-CX210E, HDR-CX210L, HDR-CX210R, HDR-CX210S, HDR-CX220, HDR-CX220B, HDR-CX220E, HDR-CX220L, HDR-CX220R, HDR-CX220S, HDR-CX250E, HDR-CX260V, HDR-CX260VB, HDR-CX260VE, HDR-CX260VP, HDR-CX260VT, HDR-CX260VW, HDR-CX270E, HDR-CX270V, HDR-CX280E, HDR-CX290, HDR-CX290B, HDR-CX290E, HDR-CX300, HDR-CX305E, HDR-CX305VE, HDR-CX320, HDR-CX350, HDR-CX350V, HDR-CX350VE, HDR-CX360E, HDR-CX360V, HDR-CX360VE, HDR-CX370V, HDR-CX430V, HDR-CX430VB, HDR-CX430VE, HDR-CX500V, HDR-CX505VE, HDR-CX520V, HDR-CX520VE, HDR-CX550, HDR-CX550E, HDR-CX550V, HDR-CX550VE, HDR-CX560V, HDR-CX560VE, HDR-CX570E, HDR-CX580, HDR-CX580E, HDR-CX580V, HDR-CX580VE, HDR-CX590V, HDR-CX6EK, HDR-CX625, HDR-CX690E, HDR-CX700E, HDR-CX700V, HDR-CX700VE, HDR-CX720V, HDR-CX730E, HDR-CX740VE, HDR-CX760E, HDR-CX760V, HDR-CX760VE, HDR-HC3E, HDR-HC5E, HDR-HC7E, HDR-HC9, HDR-HC9E, HDR-PJ10, HDR-PJ10E, HDR-PJ20, HDR-PJ200, HDRPJ200B, HDR-PJ200B, HDR-PJ200E, HDR-PJ210, HDR-PJ260E, HDR-PJ260V, HDR-PJ260VE, HDR-PJ30E, HDR-PJ30V, HDR-PJ30VE, HDR-PJ380E, HDR-PJ40V, HDR-PJ50, HDR-PJ50E, HDR-PJ50V, HDR-PJ580E, HDR-PJ580V, HDR-PJ580VE, HDR-PJ590V, HDR-PJ600E, HDR-PJ660E, HDR-PJ660V, HDR-PJ660VE, HDR-PJ710V, HDR-PJ710VE, HDR-PJ720E, HDR-PJ740VE, HDR-PJ760, HDR-PJ760E, HDR-PJ760V, HDR-PJ760VE, HDR-PJ760VEB, HDR-PJ790B, HDR-PJ790E, HDR-PJ790V, HDR-PJ790VB, HDR-PJ790VE, HDR-SR10E, HDR-SR11E, HDR-SR12E, HDR-SR5E, HDR-SR7E, HDR-SR8E, HDR-SX-43L, HDR-SX43S, HDR-SX-65L, HDR-SX65R, HDR-TD10, HDR-TD10E, HDR-TD20E, HDR-TD20V, HDR-TD20VE, HDR-TD30E, HDR-TD30V, HDR-TD30VB, HDR-TD30VE, HDR-UX19E, HDR-UX20, HDR-UX20E, HDR-UX3E, HDR-UX5E, HDR-UX7E, HDR-UX9E, HDR-XR100, HDR-XR105E, HDR-XR106, HDR-XR106E, HDR-XR150, HDR-XR155E, HDR-XR160, HDR-XR160E, HDR-XR200VE, HDR-XR260E, HDR-XR260V, HDR-XR260VE, HDR-XR350, HDR-XR350E, HDR-XR350V, HDR-XR350VE, HDR-XR500V, HDR-XR500VE, HDR-XR520V, HDR-XR5200VE, HDR-XR550, HDR-XR550E, HDR-XR550V, HDR-XR550VE, HXR-NX30U, NEX-VG10, NEX-VG10E, NEX-VG20B, NEX-VG20E, NEX-VG20EH, NEX-VG20H, NEX-VG20HB, NEX-VG30, NEX-VG30EH, NEX-VG30H, NEX-VG900, NEX-VG900E